 









How to Change the Temperature Set Point on a StingRay Parts Washer with Digital Controller

1. Locate the Temperature Controller on the front of the Control Panel (See Fig. 1)
2. Adjust the SV Number (Green) to the desired Setting, using the   keys.
3. Then Press the  key to set the new Temperature Setting.

 






Temperature Controller, Fig. 1

How to Change Temperature Units to C or F

1. Press and hold the  key for 3 seconds to access the INITIAL SETTINGS Menu.
2. Press the  key twice to display: *tPUn*
3. Press the   keys until the desired value is displayed on the lower green screen.
4. Press .

How to Change the Low Limit Temperature Setting (Optional)

1. Go to the Low Limit Adjustment Screen by pressing the  Twice.
(The PV red line will show *AL LL*)
2. Adjust the SV Number (Green) to the desired Setting, using the   keys.
3. Then Press the  key to set the new Low Limit Temperature Setting.
4. Press  once to return the Temperature Set Point Screen.