

List of Figures

Chapter - Page

Fig. 1 - 1: Standard Turntable Power Washer, View 1.....	1-3
Fig. 1 - 2: Standard Turntable Power Washer, View 2.....	1-4
Fig. 1 - 3: Rinse System	1-15
Fig. 1 - 4: Float-Level Mechanics.....	1-18
Fig. 1 - 5: Water Level Differences At Four Positions	1-19
Fig. 1 - 6: Washer Inspection Before Installation	1-25
Fig. 2 - 1: Raising the Power Washer by the Lifting Eyes.....	2-8
Fig. 2 - 2: Leveling and Anchoring Feet.....	2-11
Fig. 2 - 3: General Shim Placement, Top View of Base Frame.....	2-13
Fig. 2 - 4: Mounting the Combustion Burner (Up to 180,000 BTU).....	2-17
Fig. 2 - 5: Mounting the Combustion Burner (Up to 400,000 and 990,000 BTU)	2-18
Fig. 2 - 6: Burner Junction Box -- Wiring.....	2-19
Fig. 2 - 7: Steam Heat Source: Piping Sizes	2-21
Fig. 2 - 8: Steam Solenoid and Steam Trap Installation	2-22
Fig. 2 - 9: Water Connection Location	2-23
Fig. 2 - 10: Compressed-Air Connection	2-24
Fig. 2 - 11: General Layout of the Electrical Control Panel (Block Diagram)	2-26
Fig. 2 - 12: Steam-Exhaust Vent Pipe and Flue Pipe Attachments.....	2-29
Fig. 2 - 13: Auto Steam Exhaust (ASE) Piping and Blower Configurations	2-30
Fig. 2 - 14: Auto Steam Exhaust (ASE) Piping and Blower Assembly	2-32
Fig. 2 - 15: Installation for 1/4-HP or 2-HP Transition	2-33
Fig. 2 - 16: Installation for 1/10-HP Transition	2-33
Fig. 2 - 17: Proper ASE Transition to Avoid Condensation.....	2-34
Fig. 2 - 18: Wiring the ASE Blower Assembly.....	2-35
Fig. 2 - 19: Removable Door Position Lock Plate	2-39
Fig. 2 - 20: Door Position Lock Plate and Attachment Hardware.....	2-39
Fig. 2 - 21: Doorpost Support Without Lock Plate Attached	2-40
Fig. 2 - 22: Positioning the Door Lock Plate	2-40
Fig. 2 - 23: Tighten the Mounting Bolts.....	2-40
Fig. 2 - 24: Completed Lock Plate Installation	2-40
Fig. 2 - 25: Services and Connection Inspection	2-41
Fig. 2 - 26: Float Control Box.....	2-47
Fig. 2 - 27: Float Cam at Set-Point Water Level	2-48
Fig. 2 - 28: Water-Level Set-Point Dimensions and Measurement Location	2-49
Fig. 2 - 29: Initial Burner Settings	2-51

Chapter - Page

Fig. 2 - 30: Maximum Operating Temperature.....	2-59
Fig. 2 - 31: 400,000 BTU to 990,000 BTU Burner Diagram.....	2-59
Fig. 2 - 32: Water Temperature Thermocouple Location	2-60
Fig. 2 - 33: Rinse Chemical Injector System.....	2-68
Fig. 2 - 34: Annual Variations in Draft.....	2-72
Fig. 2 - 35: Boiler Efficiency vs. Draft.....	2-72
Fig. 3 - 1: Standard Turntable Power Washer Control Panel	3-4
Fig. 3 - 2: Water Temperature Controller & Read Out.....	3-5
Fig. 3 - 3: Cabinet Door Latch	3-7
Fig. 3 - 4: Cabinet Door Position Lock.....	3-8
Fig. 4 - 1: Maximum Actual Operating Temperature.....	4-12
Fig. 4 - 2: General Layout of the Electrical Control Panel (Block Diagram)....	4-13
Fig. 4 - 3: Automatic Rinse Cycle (ARC) Timer Increments.....	4-15
Fig. 4 - 4: Rinse Flow Rate Chart.....	4-18
Fig. 4 - 5: Rinse Injector Pump Controls.....	4-19
Fig. 4 - 6: Rinse Water Flow Adjustment.....	4-20
Fig. 4 - 7: Standard Turntable Power Washer Control Panel.....	4-21
Fig. 4 - 8: Automatic Steam Exhaust (ASE) Cycle Timer Increments.....	4-23
Fig. 5 - 1: Service Schedule	5-3
Fig. 5 - 2: Cleaning the Pump Intake Filter Box.....	5-6
Fig. 5 - 3: Lubrication Chart.....	5-7
Fig. 5 - 4: Cleaning and Replacing the PBM Nozzles.....	5-8
Fig. 5 - 5: Swivel Jam Nut - Non-adjustable Swivel	5-9
Fig. 5 - 6: Wash Pump and Pump Motor(s)	5-12
Fig. 5 - 7: Burner Blower Motor (180,000 BTU Burner Shown; Other Sizes Similar)	5-14
Fig. 5 - 8: Float Assembly.....	5-15
Fig. 5 - 9: Solenoid valves	5-17
Fig. 5 - 10: Turntable Drive and Turntable: Slip Clutch/Torque Limiter	5-19
Fig. 5 - 11: Cleaning the Heating Element.....	5-25
Fig. 6 - 1: Troubleshooting: Startup.....	6-3
Fig. 6 - 2: Troubleshooting: Ineffective Cleaning of Parts	6-4
Fig. 6 - 3: Troubleshooting: Wash Pump Motor Won't Start	6-5
Fig. 6 - 4: Troubleshooting: Wash Pump Surges.....	6-5
Fig. 6 - 5: Troubleshooting: Wash Pump Fails to Deliver Solution	6-6
Fig. 6 - 6: Troubleshooting: Wash Pump Motor Trips Overload -- High Amperage Reading	6-6
Fig. 6 - 7: Troubleshooting: Seal Leakage at Wash Pump Mounting Plate	6-7
Fig. 6 - 8: Troubleshooting: Wash Pump or Motor Vibrates or Is Noisy.....	6-7

Chapter - Page

Fig. 6 - 9: Troubleshooting: Water Does Not Heat (Gas/Oil Burner Does Not Ignite).....	6-9
Fig. 6 - 10: Troubleshooting: Water Does Not Heat (Steam)	6-10
Fig. 6 - 11: Troubleshooting: Water Does Not Heat (Electric).....	6-10
Fig. 6 - 12: Troubleshooting: Turntable Does Not Rotate	6-12
Fig. 6 - 13: Troubleshooting: Nozzles -- Ineffective Cleaning	6-13
Fig. 6 - 14: Troubleshooting: Foaming	6-14
Fig. 6 - 15: Troubleshooting: PBM Not Oscillating.....	6-15
Fig. 6 - 16: Troubleshooting: Water Not Filling Reservoir, <u>or</u> Water Overflowing Reservoir, <u>or</u> System Not Heating	6-16
Fig. 6 - 17: Troubleshooting: Washer Will Not Start.....	6-17
Fig. 6 - 18: Troubleshooting: No Rinse Cycle	6-18
Fig. 6 - 19: Troubleshooting: ASE Will Not Operate	6-19
Fig. 6 - 20: Troubleshooting: ASE Leaks Liquid.....	6-19
Fig. 6 - 21: Troubleshooting: Electrical Control System.....	6-20
 Fig. 7 - 1: Automatic Lubrication System.....	7-4
Fig. 7 - 2: Automatic Lubrication System Controller Interface	7-6
Fig. 7 - 3: Troubleshooting: Automatic Lubrication System Pump Does Not Run.....	7-8
Fig. 7 - 4: Troubleshooting: Automatic Lubrication System Pump Does Not Deliver Lubricant.....	7-9
Fig. 7 - 5: Center Manifold Mechanism and Superstructure.....	7-12
Fig. 7 - 6: Troubleshooting: Water Leaks Onto Cabinet Roof.....	7-15
Fig. 7 - 7: Troubleshooting: Center Manifold Assembly Does Not Work.....	7-15
Fig. 7 - 8: Troubleshooting: Center Manifold Light Does Not Illuminate.....	7-15
Fig. 7 - 9: Chemical Concentration Conductivity Probe	7-17
Fig. 7 -10: Troubleshooting: Peristaltic Pump Does Not Pump.....	7-21
Fig. 7 -11: Troubleshooting: Conductivity Cannot Be Maintained.....	7-22
Fig. 7 -12: Troubleshooting: Internal Reservoir Cover: Water Leaks Over Door Frame.....	7-24
Fig. 7 - 13: Troubleshooting: 50 Hz Electrical Power -- Squealing Sounds from Pump Area.....	7-27
Fig. 7 - 14: Troubleshooting: 50 Hz Electrical Power -- No Wash Cycle (No Water Pumped): Simplex Pump System.....	7-27
Fig. 7 - 15: Troubleshooting: 50 Hz Electrical Power -- Poor Cleaning Results or Abnormal Pump Noise: Duplex Pump System.....	7-28
Fig. 7 - 16: Micron Comparisons.....	7-30
Fig. 7 - 17: Troubleshooting: Wash Load Not Clean.....	7-32
Fig. 7 - 18: Troubleshooting: Solution Leaks from Filter Cover.....	7-32
Fig. 7 - 19: Setting Pump Pressure - Simplex Pump.....	7-34
Fig. 7 - 20: Setting Pump Pressure - Duplex Pump.....	7-35
Fig. 7 - 21: Pressure Control Panel.....	7-35
Fig. 7 - 22: Troubleshooting: Pump Motor Does Not Run.....	7-36
Fig. 7 - 23: HABO -- ASE Fan Installation.....	7-40
Fig. 7 - 24: HABO -- ASE Fan Installation.....	7-41

Chapter - Page

Fig. 7 - 25: Hot-Air Blow-Off (HABO) Inside Plenum	7-42
Fig. 7 - 26: Troubleshooting: HABO Heating Element Begins to Overheat	7-45
Fig. 7 - 27: Jib Crane, Rear-Mounted	7-47
Fig. 7 - 28: Rear-Mount Jib Crane: Bronze Bushing and Washer Location ...	7-48
Fig. 7 - 29: Troubleshooting: Boom Does Not Swing Freely.....	7-51
Fig. 7 - 30: Door Mount Jib Crane Component Parts	7-53
Fig. 7 - 31: Washer Jib Crane, Door Frame Mount	7-54
Fig. 7 - 32: Door Frame Mount Jib Crane: Thrust Washers Location	7-55
Fig. 7 - 33: Troubleshooting: Door Frame Mount Crane Does Not Swing Freely	7-57
Fig. 7 - 34: Oil Skimmer Assembly	7-59
Fig. 7 - 35: Troubleshooting: Skimmer-Wheel Does Not Skim	7-61
Fig. 7 - 36: Oil Coalescer Collection Chamber	7-64
Fig. 7 - 37: Oil Coalescer Reservoir and Regulator.....	7-65
Fig. 7 - 38: Oll Coalescer Pump Suction Filter	7-66
Fig. 7 - 39: Troubleshooting: Oil Coalescer Pump Not Pumping	7-67
Fig. 7 - 40: Troubleshooting: Excessive Water Removed with Oil	7-67
Fig. 7 - 41: Troubleshooting: Excessive Air Pumped into Oil Coalescer Chamber	7-67
Fig. 7 - 42: Troubleshooting: Cleaned Solution Not Draining Back into Washer Reservoir.....	7-68
Fig. 7 - 43: Troubleshooting: Power-Assist Does Not Activate	7-71
Fig. 7 - 44: Troubleshooting: Pump Pressure Gauge Does Not Work.....	7-73
Fig. 7 - 45: Rack and Fixture Set.....	7-75
Fig. 7 - 46: Small-Parts Basket.....	7-77
Fig. 7 - 47: Troubleshooting: Rinse Wand: No Hand Rinse.....	7-81
Fig. 7 - 48: Sludge Scraper -- External View	7-83
Fig. 7 - 49: Sludge Scraper -- Diagram of Parts	7-85
Fig. 7 - 50: Troubleshooting: Sludge Scraper Drag Chain Does Not Move	7-86
Fig. 7 - 51: Airlift System in Sludge Scraper.....	7-87
Fig. 7 - 52: Troubleshooting: Airlift System is Not Functioning	7-89
Fig. 7 - 53: SHIM Manifold Selector Valve Schematic	7-91
Fig. 7 - 54: SHIM Manifold System - SR4063.....	7-92
Fig. 7 - 55: Troubleshooting: PBM not Oscillating	7-93
Fig. 7 - 56: General Schematic: StingRay Pure Water Option.....	7-95
Fig. 7 - 57: Pure Water System Components	7-96
Fig. 7 - 58: Feed Solenoid Bypass Lever	7-97
Fig. 7 - 59: Pump Bypass Screw	7-97
Fig. 7 - 60: Troubleshooting: Low Filter Pressure.....	7-100
Fig. 7 - 61: Troubleshooting: Low Permeate Flow	7-100
Fig. 7 - 62: Troubleshooting: High Permeate Flow	7-100
Fig. 7 - 63: Troubleshooting: Poor Permeate Quality	7-101
Fig. 7 - 64: Troubleshooting: No Water Fill in Washer.....	7-101
Fig. 7 - 65: Troubleshooting: Transfer Pump Runs Constantly.....	7-101
Fig. 7 - 66: Troubleshooting: Washer Fills Slowly	7-101